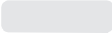
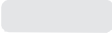
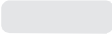
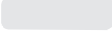
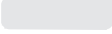
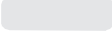
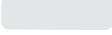
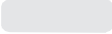
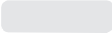
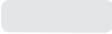
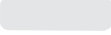
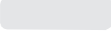
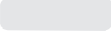
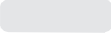
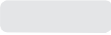
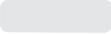
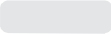
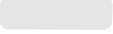
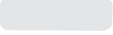
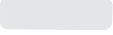
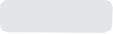
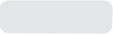
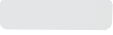
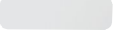
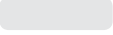
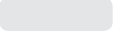
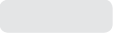
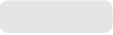
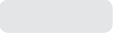
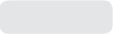
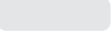
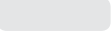
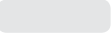
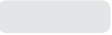
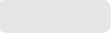
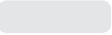
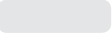
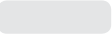
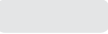
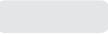
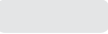
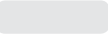


Harpro seeecret

  	      	      	    	       	    	  	   
ENG / p.2	DEU / p.13	NED / p.24	FRA / p.35	SPA / p.46	JPN / p.57	CHS / p.60	

C 700

Introduction

Congratulations on the purchase of your Hapro Seecret® anti-aging appliance! Hapro International B.V. produces high quality products made with care and craftsmanship. The Hapro Seecret® anti-aging appliances meet the same high standards. This new product line has been developed and assembled in accordance with strictest applicable standards and contains carefully selected, high-quality components. Based on scientifically demonstrated principles, Hapro Seecret® has been proven to vitalise and improve the healthy appearance of your skin in a relaxing manner.

Before you begin using the appliance, it is recommended that you first read this instructions and the accompanying brochure carefully. Among other things the documents contains extensive information about the Seecret® anti-aging concept, it's influence on the skin and the use of the appliance. With this information you will enjoy years of pleasure from your Hapro Seecret® anti-aging appliance.

Important

The information contained in this manual regarding assembly and operation should be followed in full. Failure to do so may render the product warranty or liability on behalf of the supplier null and void. If there is any uncertainty as to whether the instructions contained in this manual have been followed properly and entirely, you should contact the supplier of the appliances.

- 1 Contact your authorised Hapro dealer immediately if the appliance does not function as outlined in this manual.
- 2 Do not operate this appliance in humid and chlorine spaces.
- 3 Always make sure the fuses can carry the load. This appliance has to be protected by ground fault circuit interrupter (GFCI) of 0.03A.
- 4 Always disconnect the power to the appliance at the wall breaker (isolator) when servicing or cleaning the in-side construction of the cabin. Maintenance for which the procedure is not described in this manual should only be carried out by a qualified electrician. Never clean the electrical components with inflammable and/or chemical fluids.
- 5 Ensure that the canopy does not touch the wall when opened.
- 6 Prevent the acrylic sheets from coming into contact with sharp objects.
- 7 The appliance may not be operated if:
 - the acrylic panel in the canopy and/or bench is missing
 - one or more of the fans in the appliance are not functioning properly
 - the timing mechanism is not functioning properly
 - the temperature inside the cabin is 30°C or higher
- 8 To ensure maximum effectiveness, replace the acrylic sheet after 1200 hours.
- 9 To ensure maximum effectiveness, replace the Seecret XL 120W-R emitters after 800 hours and the Seecret 25W- R emitters after 500 hours.
- 10 Check local regulations to find out the proper procedure for lamp disposal.
- 11 DesinFact may be used to clean and disinfect the acrylic sheet. Never use cleaners that contain alcohol, as these can damage the acrylic sheet.
- 12 Emitter and other technical information of the appliance is indicated on the specification sticker.
- 13 If the supply cord is damaged, it must be replaced by the manufacturer or service agent or a similarly qualified person in order to avoid a hazard.
- 14 To replace lamps and starters, remove by turning a quarter turn to the left. Placement of new lamps and starters is done in the reverse to the above mentioned procedure.
- 15 Where applicable, clean the dust filters after every 50 hours of use. Regularly (more frequent than 50 hours) check the dust filters.
- 16 Children should be supervised to ensure that they do not play with the appliance.
- 17 The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- 18 Protect your eyes during session using the goggles provided. Contact lenses and sun glasses are not a substitute for the goggles. .

Assembly instructions

Before your Hapro Seecret® appliance leaves the Hapro plants it is tested thoroughly and inspected for defects and damage. We request you when opening the packaging to always check the product for external defects, imperfections or transport damage. Should it regrettably display defects or omissions, please contact your dealer.

Your appliance should be installed carefully using these assembly instructions. You should also check whether the local power supply corresponds to that stipulated on the type panel that is stuck to the back of your unit.

Do not place your appliance in a damp area and make sure that there is adequate ventilation. When in doubt consult your dealer.

Using the appliance

When your appliance is properly installed and functions properly it is ready for use.

Session

As with all safe and painless skin stimulation methods, a single session will not immediately improve the skin. Aging of the skin is a process that takes place over many years, so it should be no surprise that it cannot be reversed with just one session lasting several minutes. To achieve the desired effects and see visible results a series of rejuvenation sessions is required. We recommend that you indulge in 2-3 rejuvenation sessions per week over a period of 10 to 12 weeks. Keep in mind that a 48-hour rest period is required before you begin the next session.

The results will be measurable after about one month, and you will see visible results after about three months. This differs from person to person, however, and depends greatly on the skin. After three months it may be assumed that the condition of your skin has reached a level at which the frequency of the sessions can be reduced. You can then switch to 'maintenance sessions', once every two weeks.

Session time	Number of sessions per week	Number of weeks
20 minutes	2-3	10-12

 
- A course of treatment during a continuous 10 to 12 week period
- 2 to 3 sessions per week
- Rest period of 48 hours between sessions
- A maintenance session once every two weeks, after completing a course of treatment

As far as is known, from a scientific perspective, there is no need to limit the number of treatments with collagen light. However, based on careful study and practical tests, Hapro International B.V. has established these usage recommendations to help you achieve the most optimal results.


Protective goggles

The protective goggles should only be used with a Hapro Seecret appliance. They should not be used for other purposes. The protective goggles comply with protection class II according to directive 89/686/EEC.

Operation

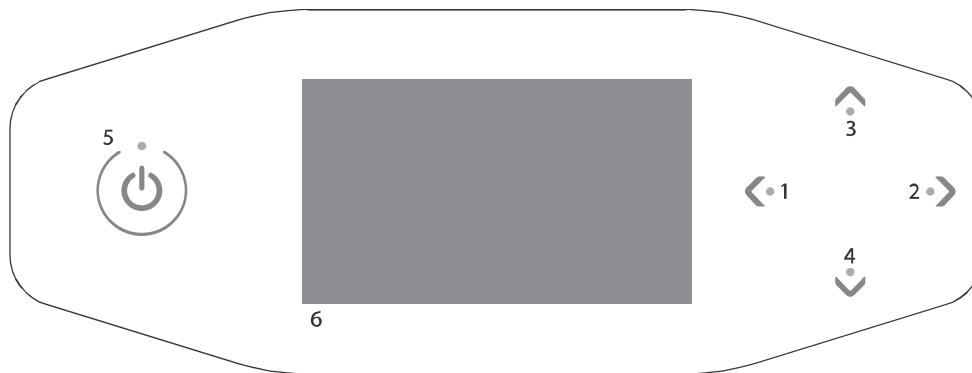

- | | |
|---|------------------------------------|
| 1 | select option at left |
| 2 | select option at right |
| 3 | scroll up in the selected option |
| 4 | scroll down in the selected option |
| 5 | Start/ Stop/ Pause |
| 6 | Display |

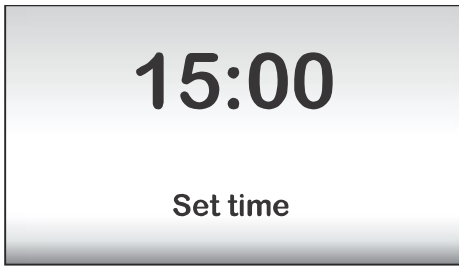 




Coin-operated mode without remote start


The appliance will be started automatically if there is no 'remote start' present on the external timer or coin unit. The 'remote start' can be configured by your dealer.


Coin-operated mode with remote start

 
Press  1x to start the appliance.

Stand-alone mode


Press  1x. The maximum time (start time) is shown on the display. The time can be changed with the  and  buttons.

Press  1x to confirm the set time. The appliance is switched on and the time begins.


After setting the time, hold  for 3 seconds to return to the standby screen. If no button is pressed for 1 minute, the appliance will return to the standby screen automatically.

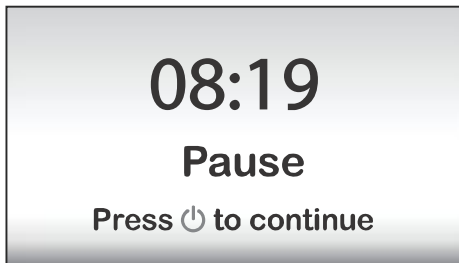


Pause mode




Press  1x during session to put the appliance in pause mode. The lamps are switched off. The body cooling remains on (maximum 4 minutes). Xsens (optional) is paused.

Coin-operated mode

The remaining time continues to be shown at the top of the display and 'Press  to restart' appears at the bottom.

Press  1x during pause mode to restart the appliance.

Stand-alone mode

 
The remaining time continues to be shown at the top of the display and 'Press  to restart' and 'Hold button 3 seconds to end the session' appear alternatingly at the bottom. Press  1x during pause mode to restart the appliance or hold  for 3 seconds to switch off the appliance. This ends the session, and the required 3 minute cool down period begins.

Note:

The time counter keeps running during 'pause mode'.

Control functions

The **<** and **>** buttons can be used to select the desired control function. Only the installed options will be shown on the display.

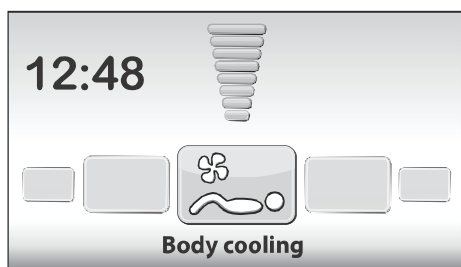


Body cooling

The **^** button can be used to increase the cooling on the body.
The **v** button can be used to decrease the cooling on the body.

The body cooling can be set to 8 levels.

 
The body cooling cannot be switched off.

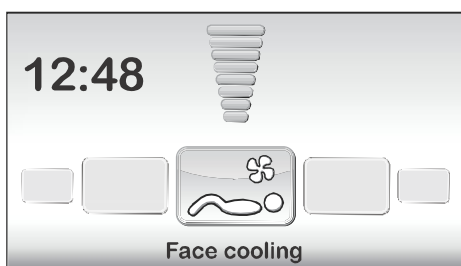

Face cooling

he **^** button can be used to increase the cooling on the face.
The **v** button can be used to decrease the cooling on the face.

 
The face cooling can be set to 8 levels.

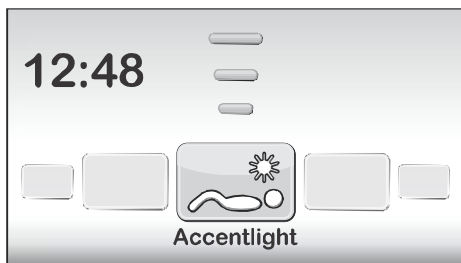

Accentlight

The button **v** can be used to set the Accentlights to the minimum intensity.
The button **^** can be used to set the Accentlights to the maximum intensity.
The value appears at the top of the display and the text 'Accentlights' appears at the bottom.

 
To switch off the Accentlights, press **v** until 'Off' appears on the screen.

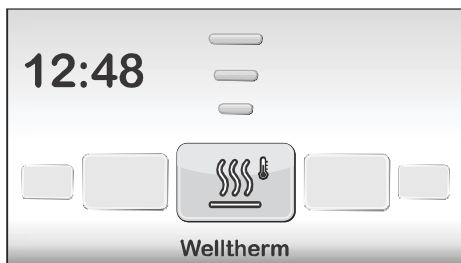

Welltherm (Option)

The **^** button is used to switch on the Welltherm.
The **v** button is used to switch off the Welltherm.

 
Welltherm only operates, if the body cooling is set on level 5-8.

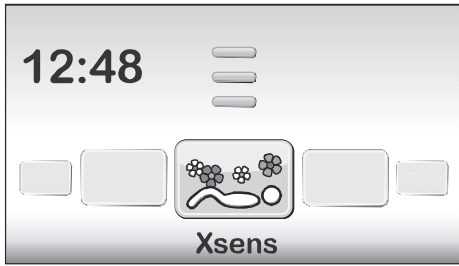

Xsens (optional)

Xsens I

The  button is used to switch on the Xsens.


The  button is used to switch off the Xsens.

The value appears at the top of the display and the text 'Xsens' appears at the bottom.

Xsens III

 
When multiple Xsens scents are available, the scent is shown on the right side of the display.

The  button can be used to select the next scent.



The  button can be used to select the previous scent.

To switch off the Xsens, press  until 'Off' appears on the screen.

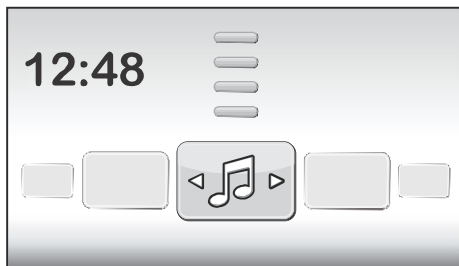This switches on during each session by default.



Music channel selection (with sound system only)

 
The desired music channel can be selected with the  and  buttons. Only available music channels are shown.

If all the music channels are connected, a choice can be made from the following channels:

'My MP3' and studio channel 1 through 6


If a SoundAround system is connected, the software will detect it automatically.


The associated buttons will be activated.

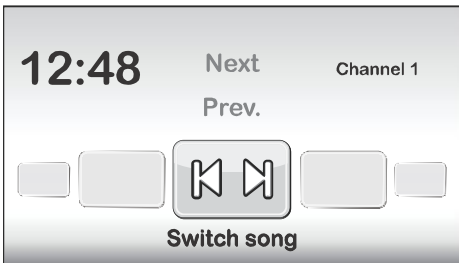


Switch song (with sound system only)



If 'Channel 1' or 'Channel 2' is selected, the 'switch song' function will be activated.

 The  button can be used to select the next song.

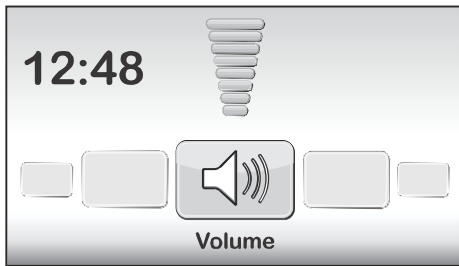The  button can be used to select the previous song.











Music volume (with sound system only)

 
The  button can be used to increase the volume of the speakers.
 The  button can be used to decrease the volume of the speakers.
 The text 'Volume' appears at the bottom of the display.
 The volume can be set to 8 levels.
 When the session starts this is set to '4' by default.

Messages

Malfunction

When a malfunction occurs, the buttons , ,  and  flash when the appliance is in standby. The appliance also produces 3 rapid beeps once every minute. Press all four of the buttons at the same time to see which fault or faults have occurred.

If a critical fault occurs, the malfunction screen appears automatically. The text 'Malfunction' appears at the top of the screen, and the fault code and an explanation appear at the bottom. Use the  and  buttons to view the various fault messages. For faults E18, E19 and E22 you can exit the malfunction screen with the  or  button.

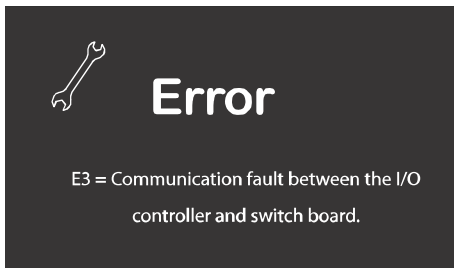

Critical errors:

- E1 = Internal timer has a defect
- E2 = Fan in bottom tray has a defect
- E3 = Communication error between relay and switch part
- E23 = Maximum tempratuur welltherm
- E6 = Unknown phase
- E7 = Relay failure
- E9 = Maximum temperature bench
- E10 = Maximum temperature canopy
- E11 = Communication error with fan board

Errors:

- E18 = Communication error with temperature sensor bench
- E19 = Communication error with temperature sensor canopy
- E22 = Change lamps

Note:

When one of the above-mentioned critical faults appears on the display, you should no longer use the appliance and the plug should be removed from the mains outlet. Contact your dealer.

If one of the other faults occurs, the appliance will still function, but not all the functions will be fully available. During fault E18 and E19 the appliance cooling will run at maximum throughout the entire session. To correct this, contact your dealer.

Reading the hour counters and software versions

Unit status	
1. Unit hours	2461
< 2. Lamp hours	237 >
3. Facial tanner hours	237
4. Airco service date	01-01-2012
Display software	5.4
Display pictures	2.3
Switch board	2.3
I/O Controller	1.0
Sens controller	1.0
Ventilation board	3.0


Status menu

Hold the ,  and  buttons for 5 seconds.

You now see the 'Quick status menu'.

The hour counters and software versions can be viewed here.

 
Resetting the hour counters

Navigate to '2. Lamp hours' or '3. Facial tanner hours' and press .

Enter the PIN code and press .

The hour counters are reset.

Maintenance

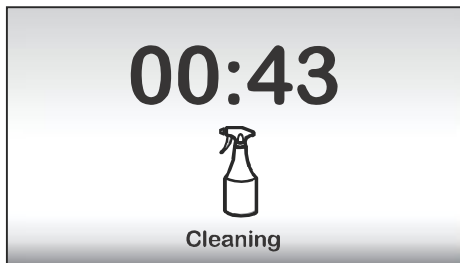

Cleaning

The appliance is equipped with a touch panel control.

To prevent accidental operation of the appliance during cleaning, you can temporarily

switch off the control. It is also recommended that you temporarily switch off the control

before you open the acrylic screen canopy.

Hold  and  for 5 seconds.

 
The display shows the remaining time + 'Cleaning'. During this period the display cannot be operated.

The time you have to clean the appliance can be changed.

The standard cleaning time is 1 minute.


Replacing the Xsens (option) cans

If you purchased an Xsens I set, you can replace an empty can with a full one.

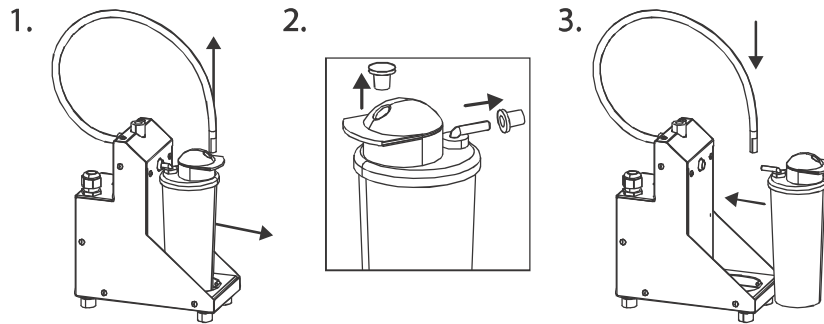


If you purchased an Xsens III set, you can replace an empty can with a full one (A). There must always be 3 cans connected.

 If you wish to install fewer than 3 cans (B), you must disconnect the supply hose to the can and install the optional plug (P). Always place full cans as far as possible to the left (position 1). In the parameter menu, set the number of full cans that are present by selecting '06 - Xsens' > '02 - Number of Xsens cans' >

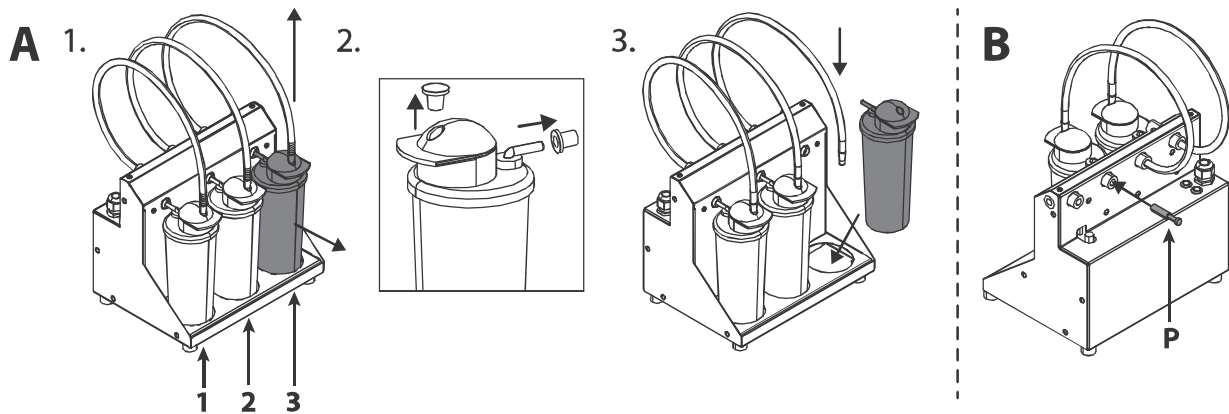

Changing SoundAround (option) memory cards

 You can replace your SmartVoice card with a different SmartVoice card.
You can place your own music on the Studio 1 and Studio 2 cards. Only use the supplied memory cards.

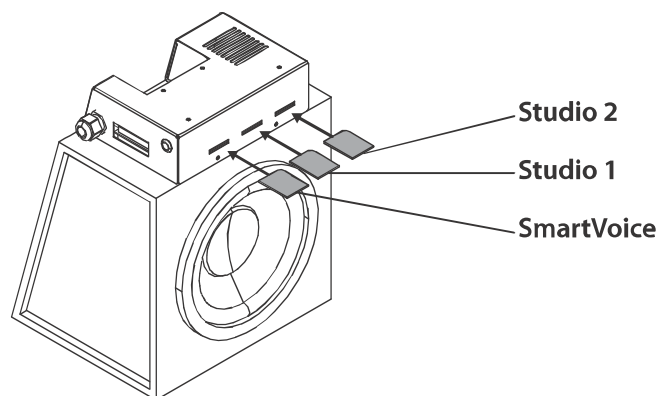

Appliance settings

Parameter menu

Hold the \wedge , \leftarrow and \rightarrow buttons for 10 seconds.
Enter the PIN code; it is set to 0000 by default. Press \odot to confirm.

Parameters

The appliance can be set to your preferences by changing the parameters shown here. The parameters that are not shown in the table may only be changed by your dealer.

Use the \wedge and ∇ buttons to navigate to the desired submenu and use \rightarrow to select it.
Use the \wedge and ∇ buttons to navigate to the desired parameter and use \rightarrow to select it.
Use the \wedge and ∇ buttons to change the value.

If you want to save the new value, press \rightarrow ; the text 'OK' is selected and the text 'Press \wedge to confirm' appears at the bottom of the display. Press \wedge to confirm. The value is saved and you now return to the submenu.

If you do not want to save the new value, press \leftarrow ; the new value is not saved and you now return to the submenu. Press \leftarrow to return to the main menu.

Press \odot to exit the parameter menu. If no button is pressed for 1 minute, you automatically return to the stand-by screen.


1. Unit		
1. Start time (minutes)	0 = Coin unit / >0 = Stand-alone	Default = 0 (Coin unit)
6. Time light on	Time at which the decorative lighting is switched on	Default = 07:00
7. Time light off	Time at which the decorative lighting is switched off	Default = 23:00
8. Unit time	Current appliance time	Default = 00:00
9. Unit date	Current appliance date	Default = 01-01-2012
12. Parameter code	Unique code for entering the parameter menu	Default = 0000
13. Clean time (minutes)	The length of time the display is switched off for cleaning	Default = 01:00
4. Body fan		
1. Body fan at start	Speed of the body fan at the beginning of the session	Default = 1
5. Head fan		
1. Head fan at start	Speed of the head fan at the beginning of the session	Default = 1
6. Xsens		
2. Number of Xsens cans	Number of installed Xsens cans	Default = 1
3. Xsens at start	Xsens scent at the beginning of the session (0 = off)	Default = 0
4. Xsens at standby	Xsens scent during the stand-by period (0 = off)	Default = 0
7. Audio		
16. Stand-by volume	Music volume during the stand-by period (0 = off)	Default = 0
17. Stand-by channel	Music channel during the stand-by period	Default = 1
18. Start volume	Music volume at the beginning of the session (0 = off)	Default = 4
19. Start channel	Music channel at the beginning of the session	Default = 2






11. Deco light		
1. Effect	Colour programme	Default = 1
	0 = single color (see color sub: 4. color number)	
	1 = all colors	
	2 = base colors quickly	
	3 = base colors slowly	
	4 = shades of white	
	5 = soft colors	
	6 = shades of white (base white)	
	7 = shades of red, orange and yellow	
	8 = shades of purple and pink	
	9 = shades of red	
	10 = shades of orange	
	11 = shades of yellow	
	12 = shades of green	
	13 = shades of blue	
	14 = shades of purple	
	15 = shades of pink	
2. Effect speed	Speed at which the colour programme cycles (1-20)	Default = 10
3. Deco light at start	Decorative lighting at the beginning of the session	Default = Off
4. Colour number	Colour	Default = 27
12. Collagen		
1. Default collagen mode		Default = 1
2. UV time		Default = 10
13. Welltherm		
1. Heating at start		Default = On

 Information on Lamps

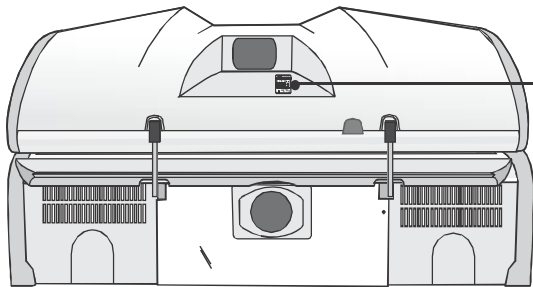The lamps mentioned are a summary of the types that are suitable for use in the appliance.

Lamps
Secret XL 120W-R
Secret 25W-R
VitaD+ XL 100W



Model:	Seecret	
Type:	
Serial number:	00 xx 000000	
Rated voltage:	400V/3N~/PE/50Hz	
Rated power input: kW	
	Ballast:
	Ballast: W
	Ballast: W
Made by: Hapro International B.V. PO Box 73 4420 AC Kapelle, Netherlands		

Cleaning

Always unplug the appliance and let it cool down before cleaning it.

- You can clean the outside of the appliance with a damp cloth. Make sure that no water runs into the appliance.

Never use scouring pads and abrasive liquids such as scouring agents, petrol or acetone to clean the appliance.

- Clean the protective goggles with a moist cloth.

Replacement

Lamp

The light emitted by the lamps will become less bright in time (i.e. after a few years in case of normal use). When this happens, you will notice a decrease in the capacity of the appliance. You can solve this problem by setting a slightly longer session time or by having the lamps replaced.

Always have the lamps and starters replaced by a service centre authorised by Hapro. Only they have the knowledge and skills required for this job and the original spare parts for your appliance.

Protective goggles

Additional or replacement goggles can be ordered at your local dealer.

Environment

- The lamps contain substances that may pollute the environment. When you discard the lamps, do not throw them away with the normal household waste, but dispose of them at an official collection point.
- Do not throw the appliance away with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this you will help to preserve the environment.

Guarantee & service

Our appliances are manufactured with the greatest attention and are of excellent quality. Every Hapro Seecret® appliance is manufactured to meet the international IEC/EN standards. We provide a manufacturer's warranty of 1 year. Your new appliance has a manufacturer's guarantee of 1 year, which commences on the date of installation. Within the warranty period all faults that are the result of material or manufacturing errors will be repaired at no cost. Please contact your dealer for any warranty enquiries.

In order to make a claim under the terms of this guarantee, you must be able to produce the original invoice or receipt bearing the date of purchase. The type and serial number of the appliance should also be indicated.

The warranty is subordinate to the national regulations on product warranties.

Not covered under this warranty

Appliances which have the type, serial number and/or other identification labels removed, damaged or altered.

Lamps, starters and acrylic sheets.

Damage due to purchaser abuse, neglect, transport, improper use or improper maintenance.

Damage due to use of accessories not originally supplied by Hapro or inferior accessories.

Damage due to installation, repair or assembly not done by Hapro authorised personnel.

Damage due to fire, lightning, earthquakes or other natural disasters.